

Figure 1


 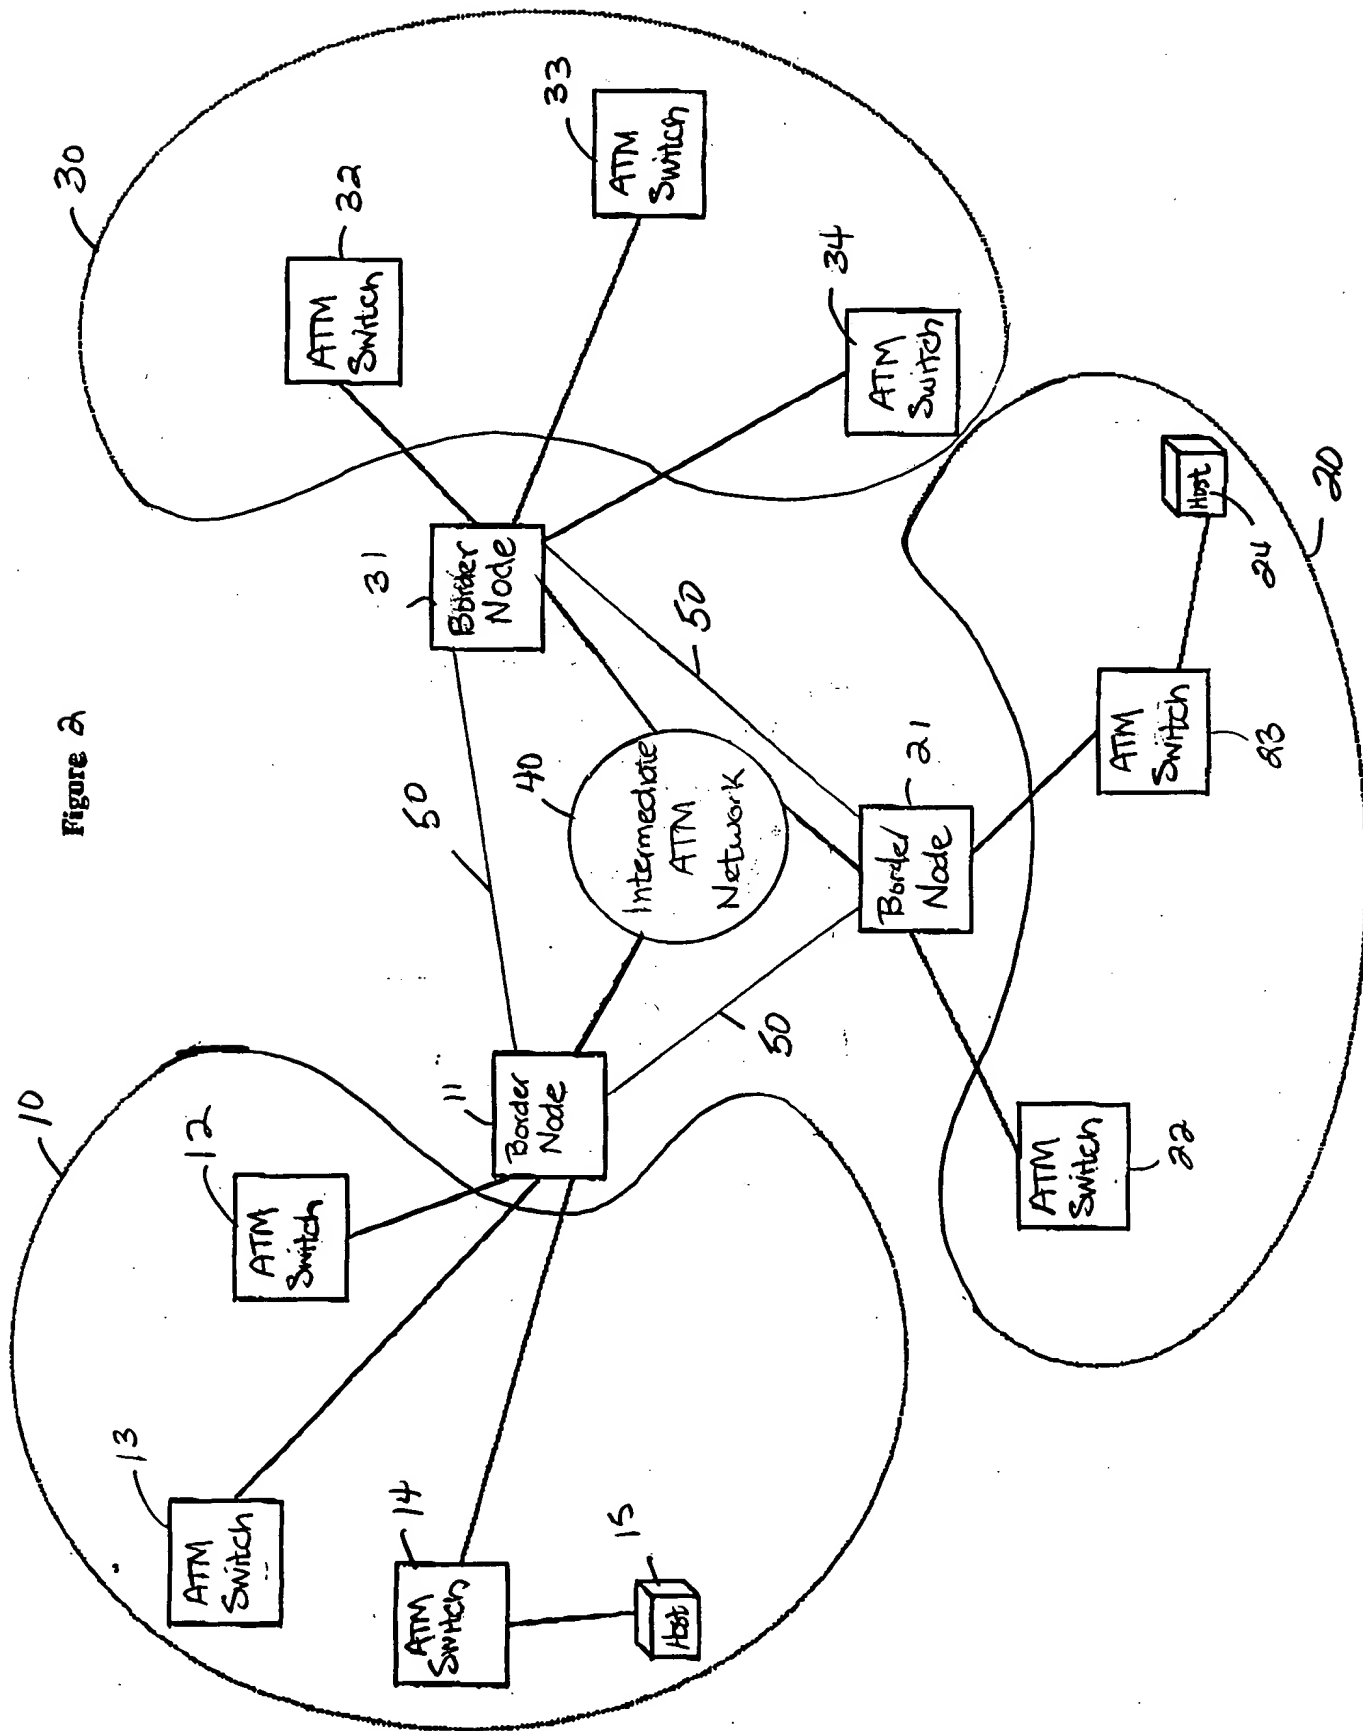


Figure 2

Fig. 3.



310

Generate a SETUP message at a calling party host specifying an ATM system address of a called party host in a called party information element

310

Substitute at the calling party border node in the called party address information element the intermediate switching ATM network address of the called party BN for the ATM system address of the called party host.

320

Route the call over the intermediate switching ATM network from the calling party border node to the called party border node based on the intermediate switching ATM network address of the called party BN in the called party address information element.

330

Substitute at the called party BN in the called party address information element the ATM system address of the called party host for the intermediate switching ATM network address of the called party BN.

340

Route the call to the called party host based on the ATM system address of the called party host in the called party address information element